

Mixer' S dimensions

# BM10/BM10N

## INDEX


Mixer's dimensions Figure 1 Mixer's configuration Figure 2 Centre axle Figure3 Gear axle Figure 4 Driving axle Figure 5 Complete of motor Soluciones de pesaj Figure 6 Fork and speed axle Figure 7 Complete of rise and drop Figure 8 Turning plate and mixing axle Figure9 Standard accessories Operation information and breakdown and settlement Warning and special attention 12 Technical parameters 13 Circuit diagram 14



#### Attention :

- ➤Don't rinsing with water pipes.
- ➤ Don't touching the electrical switch and power source by wet hand
- ➤ Please pull the plug out before maintain the mixer and get profession maintenance to see to

#### FIGURE 1 Mixer configuration

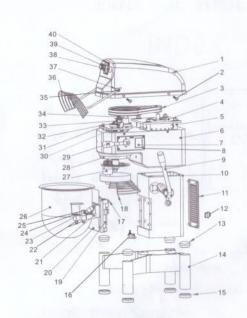

#### Attention :

- > We are already immited enough much lubricated grease, so it can be used for 3 year at normally . but you must change new grease after repairing
- > please tighten up a cover of avoiding grease after change the new grease .

 
	Accessory's name	Qty
1	Top cover	1
2	Screw M5*12	4
3	Belt of motor SPZ687	2
4	Motor	1
5	Axle of motor	4
6	Gear box	1
7	Name plate	1
8	Screw M4*6	1
9	Handle	1
10	Column	1
11	Rear cover of stand	1
12	Overload switch	1.
13	Rubber 1	4
14	Seat	2
15	Rubber 2	4
16	Switch of rise and drop	1
17	Axle of handle	1
18	Safety net 1	arckin
19	Guides	2
20	Baffle of guides	(I
21	Fork	1
22	Nut M8	4
23	Lock of barrel	2
24	Screw	2
25	Screw M8*50	2
26	Barrel	1
27	Turing plate	1
28	Inner gear	1
29	Handle of speed	1
30	Micro-switch	1
31	Cover of bearing	1
32	Centre axle	1
33	Gear axle	1
34	Initiative axle	1
35	Screw M8*16	2
36	Safety net 2	1
37	Axle of safety net	2
38	Urgency stop switch	1
39	Fluctuate switch	1
40	Timer	1

#### BM10/BM10N MIXER


#### FIGURE 2 Centre axle




2	Spring washer 10	1
3	Washer 10	1
4	Bearing 6202	1
5	Avoiding cover	1
6	Roller 8X16	4
7	Spring	8
8	Clutch	1
9	Gear ring	1
10	Dividing ring	1
11	Small joint gear	1
12	Bearing sleeve	2
13	Key 6X14	1
14	Key 5X24	2
15	Key 6X20	1
16	Centre axle	1
17	Joint	1
18	Big joint gear	1
19	Washer of centre axle	1
20	Bearing 6204	1
21	O ring 22.5X1.5	1
22	Sieeve of centre axle	1
23	Oil seal 25X40X8	1




- After repairing. To ensure installed that the clutch and joint in accordance with the correct diagram,
- the oil seal whether broken.
- In the demolition or install, due to avoiding the bearing to be broken, you should tap bearing out gently.

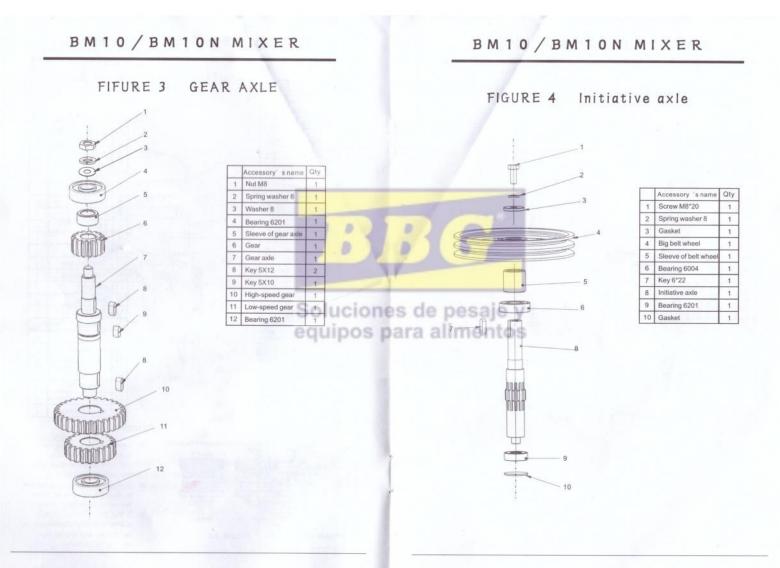


MANUAL DÉ USUARIO BATIDORA BÉG REF: 10K

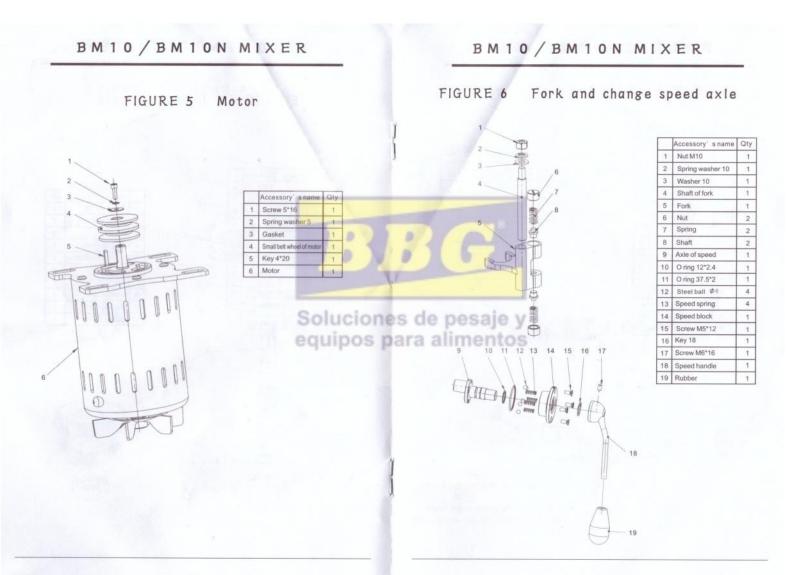

MANUAL DE USUARIO BATIDORA BBG REF: 10K

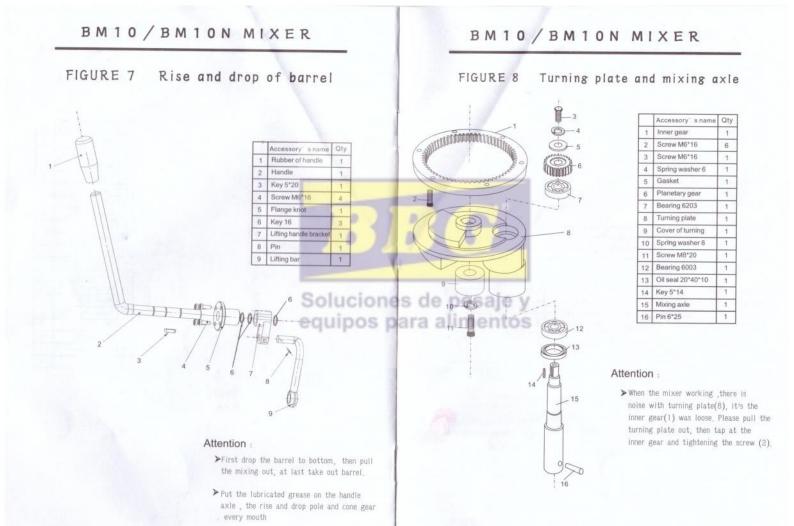


#### FIGURE 9 Standard accesseries

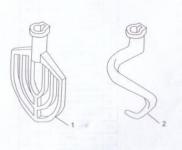



	Accessory's name	Qty
1	Mixing 1	-1
2	Mixing 2	1
3	Mixing 3	.11
4	Barrel	uği

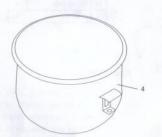


#### Attention :

➤ Any mixing easy to install and rotates the mixing clockwise to locked, push the mixing up and rotates counter—clockwise then remove the mixing.

#### BM10/BM10N MIXER

#### Operation information

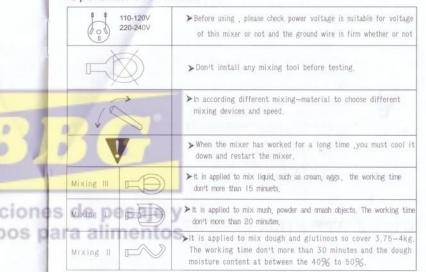

#### Breakdown and settlement

Trouble	Probable cause	Remedy		
Mixer can't run after switch on.	It is not good to touch electric.	Check the electric circuit.		
Motor is to hot and speed decreases.	Not enough voltage or not suitable for choosing agitator.	Check the voltage or choose suitable position and agitator,		
Oil leakage,	The oil seal broken.	nange the new one.		
It's hard to raising handle.	Orbit is erosion or the handle's axle and cone gear are dry.	Clean the damaged one and put the lubricate grease,		
The mixer's head noise and too hot.	The lubricated grease is not good,	Put in or change grease.		
The mixing touches the barrel.	Mixing or barrel change the shape.	Repairing or change the mixing or barrel.		
Without high, middle and low-speed output,	The flat key of 7# and figure 4 fret.	Change the flat key of 7# and figure 4.		
There're high and middle—speed output.	The spring reed of clutch rupture or the gear ring broken.	Change the accessories.		

# WARNING AND SPECIAL ATTENTION WARNING

- > Don't rinsing with water pipes .
- > Please pull the plug out before maintain the mixer and get maintenance to see to it,
- > Is't dangerous of touching the electrical switch and power source by wet hand.
- > When there are some damages in the mixer, please stop using it,



- ➤ There is a ground screw (Signed\* ±\*), when the mixer needs to be repairing and be smooth to repair, finally you can not take off the ground wire.
- > When the working , don't put your hands into the barrel and don't touching the mixing devices .
- > Minors are not allow to close the mixer.
- ➤ Mixer must fix on the dry wooden and put the mixer in safety-working zone
- ➤ If the electrical line was broken ,please get the profession maintenance to change it

#### SPECIAL ATTENTION

- Before the using, you should clear the dirt away of the barrel and mixing , when you clear the mixing please carefully. And correct installation of barrel on the fork.
  Don't make it tilt.
- When you choosing the mixing devices, please in according to the nameplate's marked to choosing the correspond speed of, if you choosing wrong, it make the accessory was broken or reduce the mixer's service life.
- 3. After using, please clear barrel and the mixing, then put they are in place of safety and clean-zone. Don't forget to cut off the power source.
- 4. Please keep the dry, public health and safety environment surround the mixer

## BM10/BM10N MIXER

## Technical parameters

Туре	BM10	BM10	BM10N	BM10N
Safety Guard	No	No	Yes	Yes
Mixer (L)	10	10	10	10
Power supply (V)	110-120	220-240	110-120	220-240
Input power (Hz)	60	50	60	50
Rated power of input (W)	600	600	600	600
pesafely	552	460	552	460
Mixing speed (r/min)	281	234	281	234
	142	118	142	118
Greatest capacity of flour(kg)	3.75~4.0	3.75~4.0	3.75~4.0	3.75~4.0

MANUAL DE USUARIO BATIDORA BBG REF: 10K

Soluciones d

equipos para

